

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

Removal/Installation of Major Assemblies - Merit Boardwalk

Trackball Removal

1. Turn off and unplug the game.
2. Loosen the 2 screws on the underside of the control panel, then unlock and open the panel.
3. Remove the 6-pin wire harness connector, as well as the fast-on connectors attached to the trackball's light bulb (if applicable). See Figure 1.
4. Remove the nut securing the ground wire(s) to the control panel. Save the nut to secure the new ground wires. See Figure 1.
5. Remove the 4 screws holding the trackball assembly in place. Remove the trackball assembly from the game.

Trackball Installation

1. Place the new trackball assembly over the captive studs on the mounting plate. **NOTE: The trackball assembly is marked with an arrow and "MONITOR" notation to assist with proper positioning. Figure 1 shows the trackball mounted correctly.**
2. Use the 4 existing screws to secure the trackball to the mounting plate's captive nuts. See Figure 1.
3. Reconnect the 6-pin wire harness and the 2 fast-on connectors that power the trackball's light bulb (if applicable). See Figure 1.
4. Secure the ground wires with the existing nut. See Figure 1.
5. Close and lock the control panel. Tighten the screws on the underside of the panel.
6. Plug in and turn on the game.

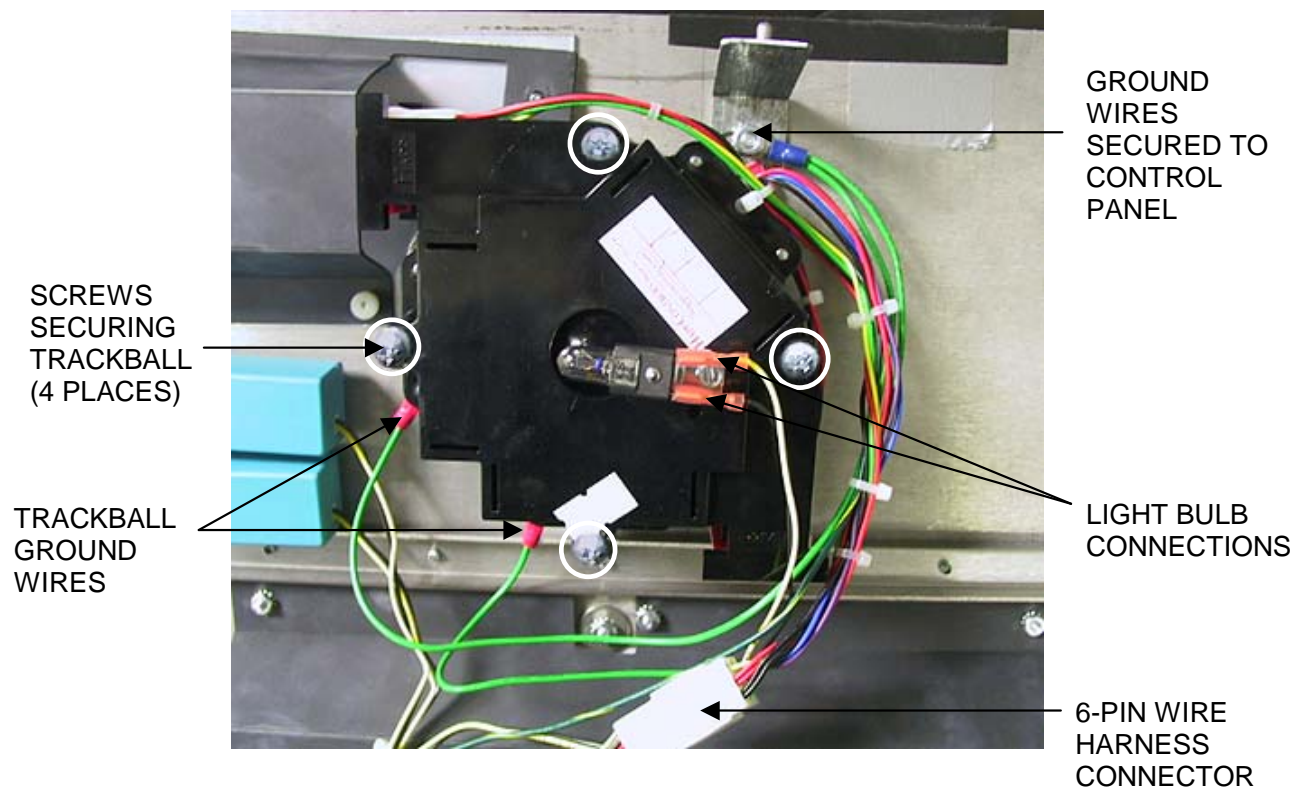


FIGURE 1 - TRACKBALL ASSEMBLY SECURED TO UNDERSIDE OF CONTROL PANEL