

EVO Stand Installation Instructions

CONTENTS:

| QTY | PART NO. | DESCRIPTION |
|-----|-----------|--------------------------------|
| 1 | WD0048-01 | EVO STAND |
| 1 | MW1067-01 | MOUNTING PLATE |
| 1 | HW0271-02 | 1/4 x 20 x 3 1/2 MACHINE SCREW |
| 1 | HW5554 | 1/4 x 20 WASHER |
| 1 | HW3310 | 1/4 x 20 WINGNUT |

1. Turn off the game and disconnect it from its power source.
2. Insert the provided screw all the way into the provided metal plate.
3. Carefully turn the game on its side. Insert the metal plate under the lazy Susan as shown in Figure 1. The head of the screw should be closest to the game. See Figure 1.

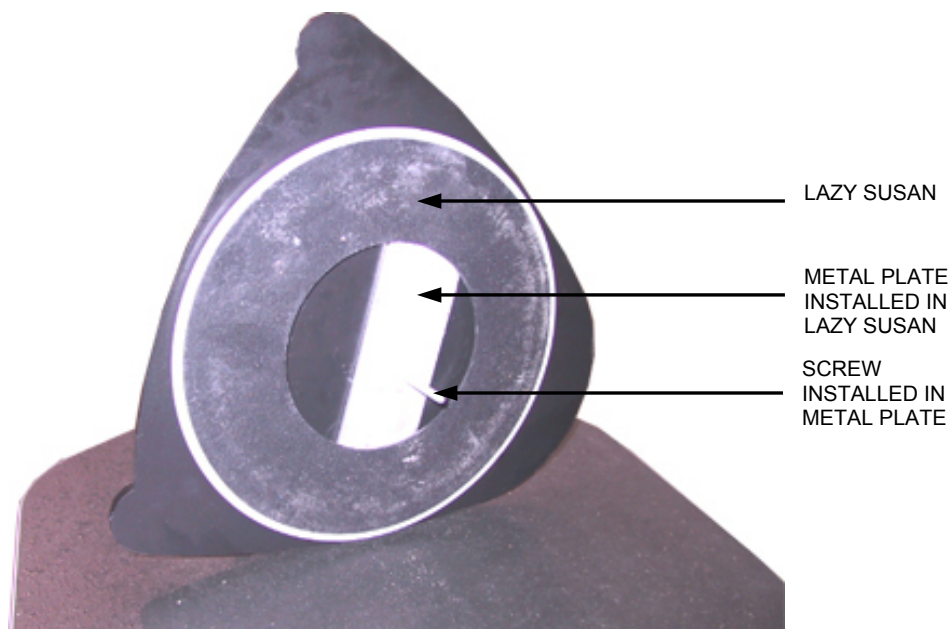


FIGURE 1 - EVO GAME ON SIDE WITH SCREW AND METAL PLATE INSTALLED

4. Carefully turn the game over, line up the screw in the bottom of the game with the hole in the top of the stand, and place the game on the stand.
5. Unlock and open the back door of the stand.
6. Secure the game to the stand by installing the provided washer and nut on the screw inside the stand.
7. Plug in the game and turn on the power.

NOTE: *If you are installing a Premiere Tournament game, a chain and padlock have been provided to offer additional security. Route the chain through the U-bolt on the back of the game and secure it to a stationary, secure device using the padlock.*