

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

Removal/Installation of Major Assemblies - Megatouch Money Shoot

Hard Drive Removal

1. Turn off and unplug the game.
2. Unlock and open the bottom door.
3. Remove the 4 screws fastening the electronics box cover and carefully remove the cover. See Figure 1.
4. Using Figure 2, locate the hard drive behind the I/O board. Remove the 4 screws and any connectors securing the I/O board to the hard drive assembly.
5. Remove the 5 shoulder washers securing the hard drive assembly to the electronics box, then remove the assembly until you're able to disconnect the hard drive power connector and hard drive ribbon cable. See Figure 2.
6. Remove the 4 screws fastening the hard drive to the mounting plate. See Figure 3.
7. Slide the hard drive out of the mounting plate.

Hard Drive Installation

1. Slide the new hard drive into the mounting plate and secure with the 4 screws.
2. Using the existing hardware, re-secure the I/O board to the hard drive mounting plate. Reconnect any necessary connectors.
3. Reconnect the power connector and ribbon cable to the hard drive, then slide the hard drive assembly into place in the electronics box. Tighten the 5 shoulder washers to secure. See Figure 2.
4. Replace the electronics box cover and fasten it with the 4 screws. See Figure 1.
5. Close and lock the bottom door.
6. Plug in and turn on the game.

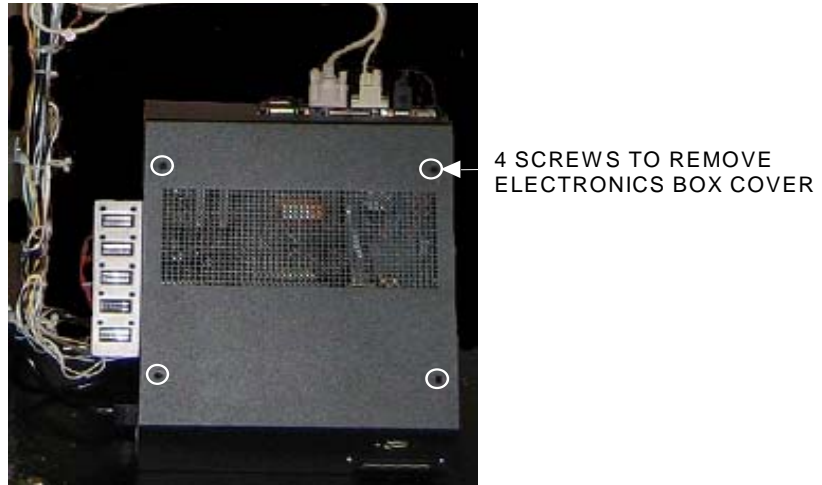


FIGURE 1 - CLOSED ELECTRONICS BOX - LOCATED IN BOTTOM OF MONEY SHOOT CABINET

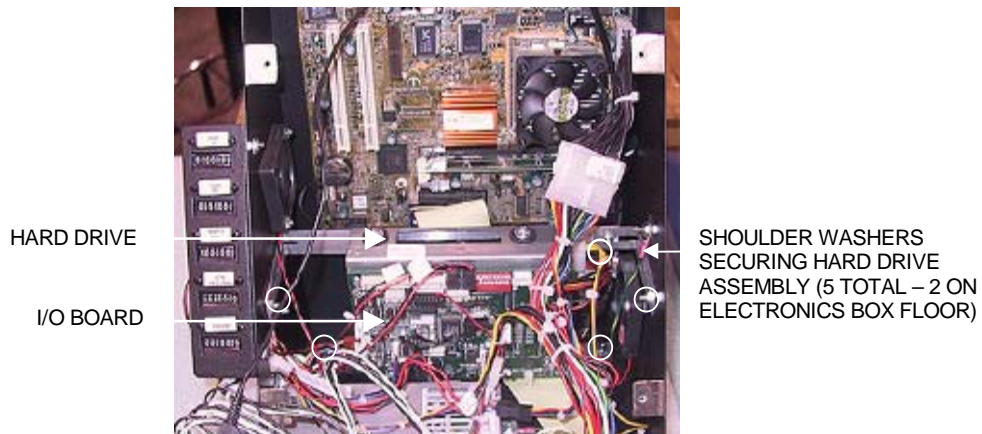


FIGURE 2 - ELECTRONICS BOX WITH COVER REMOVED - CPU SECTION



FIGURE 3 - HARD DRIVE