

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

Removal/Installation of Major Assemblies - Money Shoot

Top Bezel Removal

1. Turn off and unplug the game.
2. Unlock and open the top bezel
3. Remove the 6 hexnuts and screws securing the bracket to the back of the game (including the two screws holding the small silver bracket). See Figure 1.
4. Go to Step 5 if you are not replacing the top bezel hinge.
Lift the monitor bezel, and remove the 6 hexnuts and screws securing the exterior bracket to the game (see Figure 2). Remove the bracket.
5. Close the monitor bezel. Locate the yellow rubber coated brackets. On the left and right sides, remove the hexnut, spring, spacer, and screw securing the top bezel to the bracket. See Figure 1.
6. Lift and remove the top bezel.

Top Bezel Installation

1. Go to Step 2 if you are not replacing the top bezel hinge.
Place the new bracket in the correct position. See Figure 3.
2. Use the 6 hexnuts and screws to secure the exterior bracket to the game in the monitor bezel section. See Figure 2.
3. Close and lock the monitor bezel.
4. Replace the hexnut, spring, spacer and screw securing the top bezel to the side brackets on the left and right sides. See Figure 1.
5. Replace the 6 hexnuts and screws securing the bracket to the back of the game (including the silver bracket and 2 screws). See Figure 2.
6. Close and lock the top bezel.
7. Plug in and turn on the game.

6 SCREWS
AND HEXNUTS
SECURING BRACKET

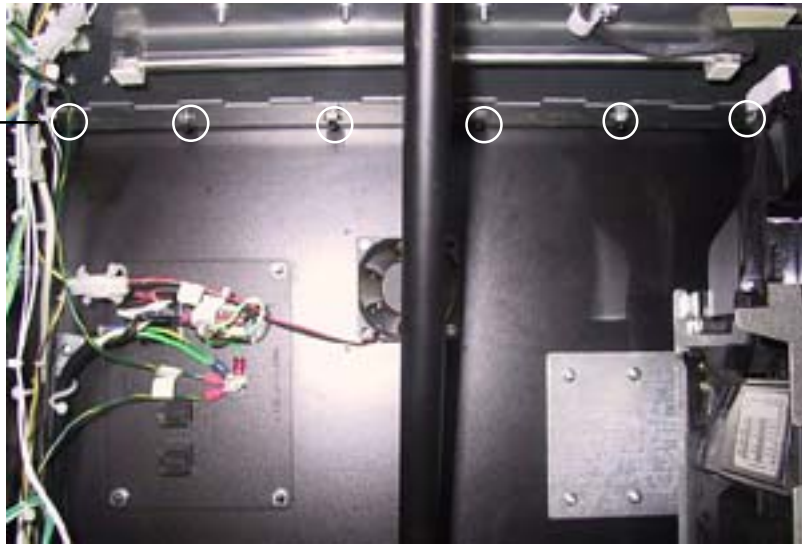


FIGURE 1 - BRACKET - UNDER MONITOR BEZEL

HEXNUT, SPRING,
SPACER AND SCREW



FIGURE 2 - SCREWS AND HEXNUTS SECURING HINGE - UNDER TOP BEZEL

HINGE SECURING
TOP BEZEL



FIGURE 3 - EXTERIOR VIEW OF BRACKET - TOP VIEW OF THE GAME