

## **ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

### **Removal/Installation of Monitor - Mr. VIPS**

#### **Monitor Removal**

1. Turn off and unplug the game.
2. Unlock and remove the upper rear door.
3. To remove the large prize assembly, first remove the 2 nuts and bolts fastening the cap and unplug the fluorescent light assembly, then remove the remaining 8 nuts and bolts fastening the prize assembly to the game. The cap and prize assembly can be removed together. See Figure 1.
4. Remove the cable clamp fastening the small prize assembly light wiring to the monitor frame. See Figure 2.
5. From inside the game, access and remove the 4 screws (2 per side) fastening the sides of the shroud to the game. See Figure 3.
6. To completely remove the shroud and proceed with monitor removal, first determine the type of hardware securing the shroud to your game. See Figures 4 and 5.

**Games with screws securing front of shroud:** Remove the 4 screws from under the monitor (see Figure 4), then carefully remove the shroud and small prize assembly from the game. Then remove the bolts and nuts (there may be as many as 6) securing the monitor to the game (see Figures 6-8 for possible locations).

**Games with bolts securing front of shroud:** Remove the bolts and nuts (there may be as many as 6) securing the monitor to the game (see Figures 6-8 for possible locations). Then carefully pull the monitor towards you until you have enough room to access the 4 nuts securing the bolts holding the front of the shroud to the game. Remove the nuts and bolts, then carefully remove the shroud and small prize assembly from the game.

7. Remove the two nuts and washers securing the touchscreen controller to the inside of the monitor (see Figure 9) and remove the controller from the mounting screws. Then disconnect the cable from the back of the controller and disconnect the Molex connector (orange and gray wires) running from the touchscreen controller cable to the main power harness.
8. Disconnect all harnesses from the monitor.
9. Remove the monitor from the game.

#### **Monitor Installation**

1. Place the new monitor in the game. If the front of the shroud was secured with bolts, be sure to temporarily leave enough room in front of the monitor to replace the mounting hardware.
2. Reconnect all harnesses to the monitor.
3. Connect the new touchscreen controller cable in the back of the controller and secure the controller on the mounting screws in the game with the existing hardware (see Figure 9). Also connect the Molex connector (orange and gray wires) to the main power harness.
4. Replace the shroud and the prize assembly, then secure the front of the shroud with the existing hardware.
5. Secure the monitor in the game with the existing hardware. See Figures 6-8.

#### **Troubleshooting Information - Removal/Installation of Major Assemblies - Mr. VIPS**

**ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

**Removal/Installation of Major Assemblies -  
Mr. VIPS (cont'd)**

6. From inside the game, replace the 4 screws (2 per side) fastening the sides of the shroud to the game. See Figure 3.
7. Fasten the small prize assembly light wiring to the monitor frame with a new cable clamp as shown in Figure 2.
8. Replace the cap and large prize assembly, then replace the 8 nuts and bolts fastening the prize assembly to the game. Then replace the 2 nuts and bolts fastening the cap to the game and plug in the fluorescent light. See Figure 1.
9. Replace and lock the upper rear door.
10. Plug in and turn on the game.

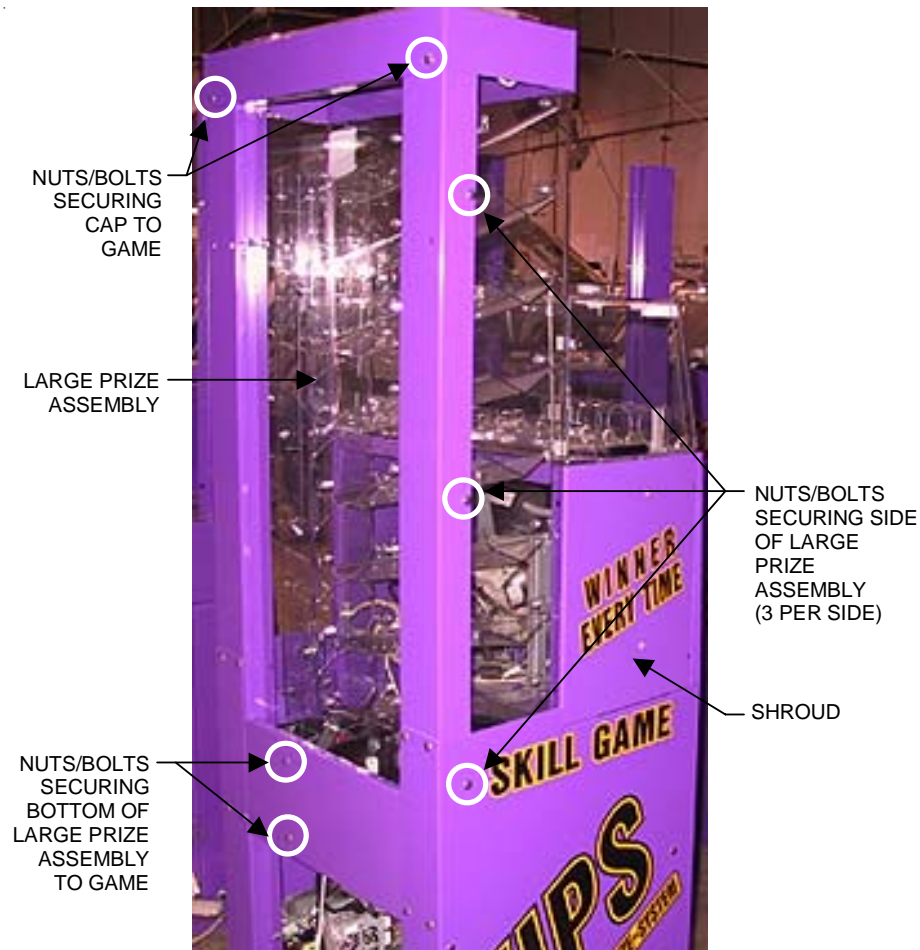


FIGURE 1 - SIDE/REAR VIEW OF GAME

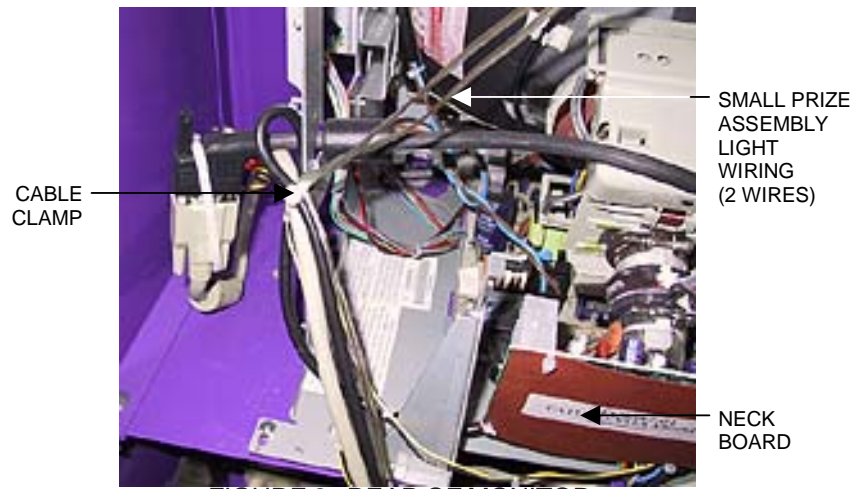


FIGURE 2 - REAR OF MONITOR

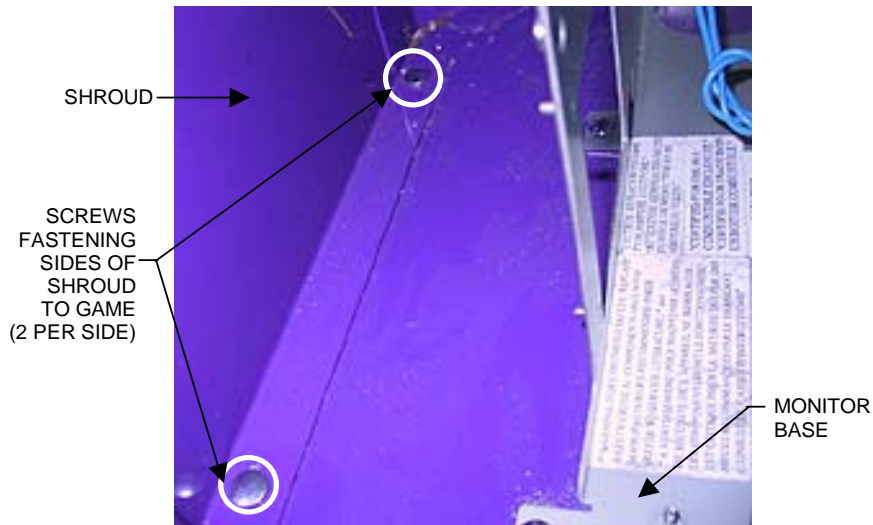


FIGURE 3 - INSIDE OF SHROUD



FIGURE 4 - FRONT OF SHROUD FASTENED WITH SCREWS



FIGURE 5 - FRONT OF SHROUD FASTENED WITH BOLTS



FIGURE 6 - POSSIBLE HARDWARE LOCATION FOR MOUNTING MONITOR

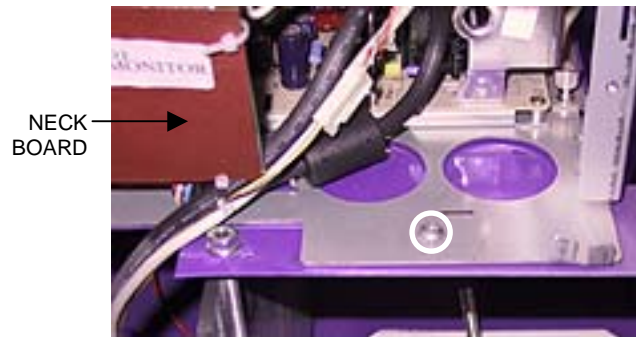


FIGURE 7 - POSSIBLE HARDWARE LOCATION FOR MOUNTING MONITOR

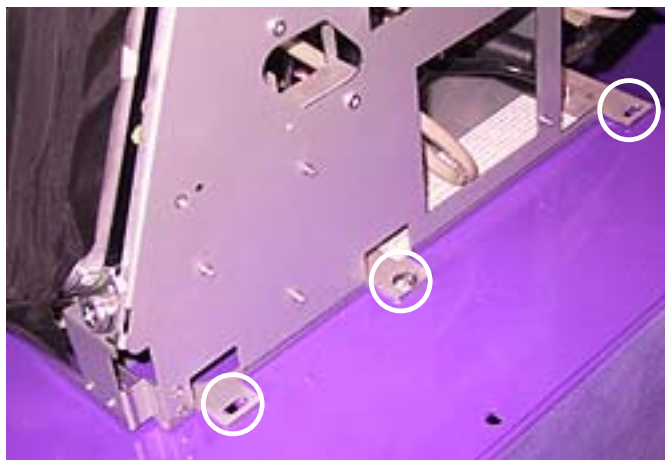


FIGURE 8 - POSSIBLE HARDWARE LOCATION FOR MOUNTING MONITOR



THUMBNUTS  
SECURING  
TOUCHSCREEN  
CONTROLLER

FIGURE 9 - TOUCHSCREEN CONTROLLER