

CRT200/CRT250/CRT260

1-BLUE DRIVE	31-P1 CANCEL LAMP-DEAL LAMP
2-GREEN DRIVE	32-P1-PLAY LAMP-POINTS LAMP
3-RED DRIVE	33-P1 DISC 5 LAMP
4-VERT. DRIVE	34-P1 DISC 4 LAMP
5-HORZ. DRIVE	35-P1 DISC 3 LAMP
6-N\C	36-P1 DISC 2 LAMP
7-GROUND	37-P1 DISC 1 LAMP
8-GROUND	38-N\C-COIL**
9-GROUND LOGIC	39-SPEAKER
10-GROUND LOGIC	40-SPEAKER
11- +5 VDC	41-N\C
12- +5 VDC	42-P2 PLAY SWITCH
13- +12 VDC	43-P2 DISC 5 SWITCH
14- VLAMP +10.5-12.0 VDC	44-P2 DISC 4 SWITCH
15- V LAMP RETURN	45-P2 DISC 3 SWITCH
16-N\C	46-P2 DISC 2 SWITCH
17-P2 DISC 1 LAMP	47-P2 DISC 1 SWITCH
18-P2 DISC 2 LAMP	48-ADJUST 3
19-P2 DISC 3 LAMP	49-ADJUST 2
20-P2 DISC 4 LAMP-BOOKS	50-ADJUST 1
21-P2 DISC 5 LAMP	51-GROUND
22-V METER LAMP	52-GROUND
23-V METER LAMP	53-P2 CANCEL-STAND SWITCH
24-P2 PLAY LAMP	54-DIAG.-CALIBRATION SWITCH
25-ACCY # 2	55-BOOKS-SETUP SWITCH
26-ACCY # 1	56-COIN 2 SWITCH
27-N\C	57-COIN 1 SWITCH
28-LOCKOUT COIL**	58-UNDEFINED-HIGH SWITCH
29-P2 CANCEL/STAND LAMP	59-P1 CANCEL-REAL SWITCH
30-UNDEFINED/HI SCORE LAMP	60-P1 PLAY POINTS SWITCH
	61-P1 DISC 5 SWITCH
	62-P1 DISC 4 SWITCH
	63-P1 DISC 3 SWITCH
	64-P1 DISC 2 SWITCH
	65-P1 DISC 1 SWITCH