



MOD BOX ASSEMBLY FROM THE FRONT

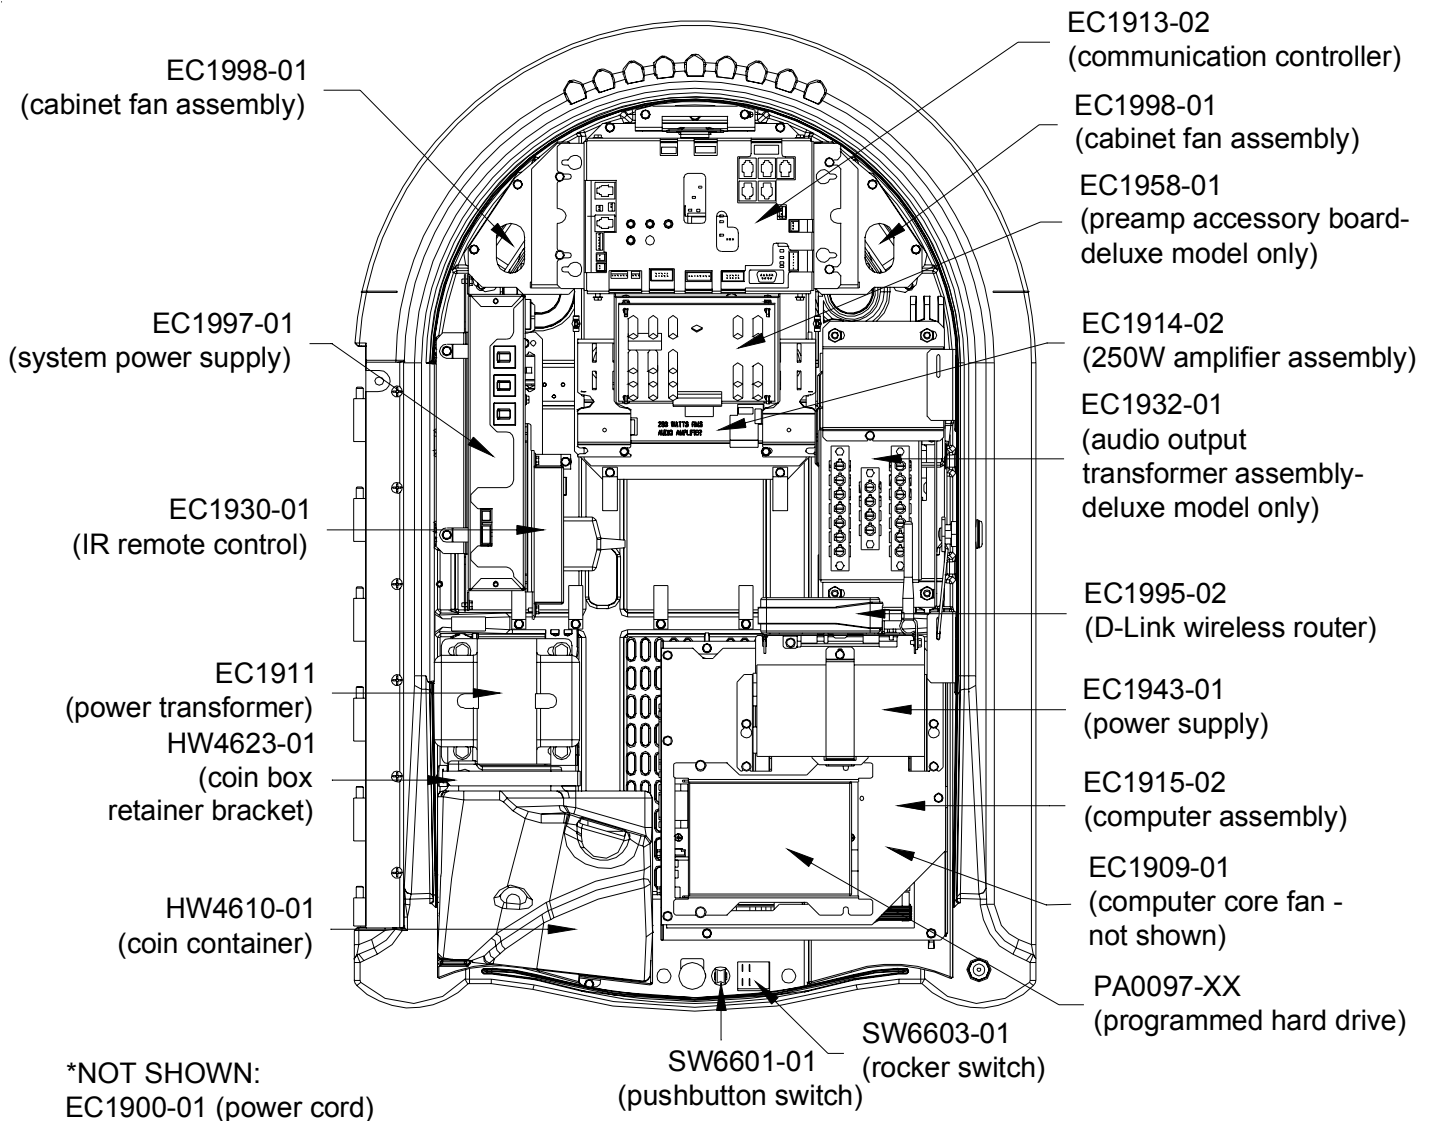

MOD BOX CABINET SHOWN WITHOUT DOOR ASSEMBLY

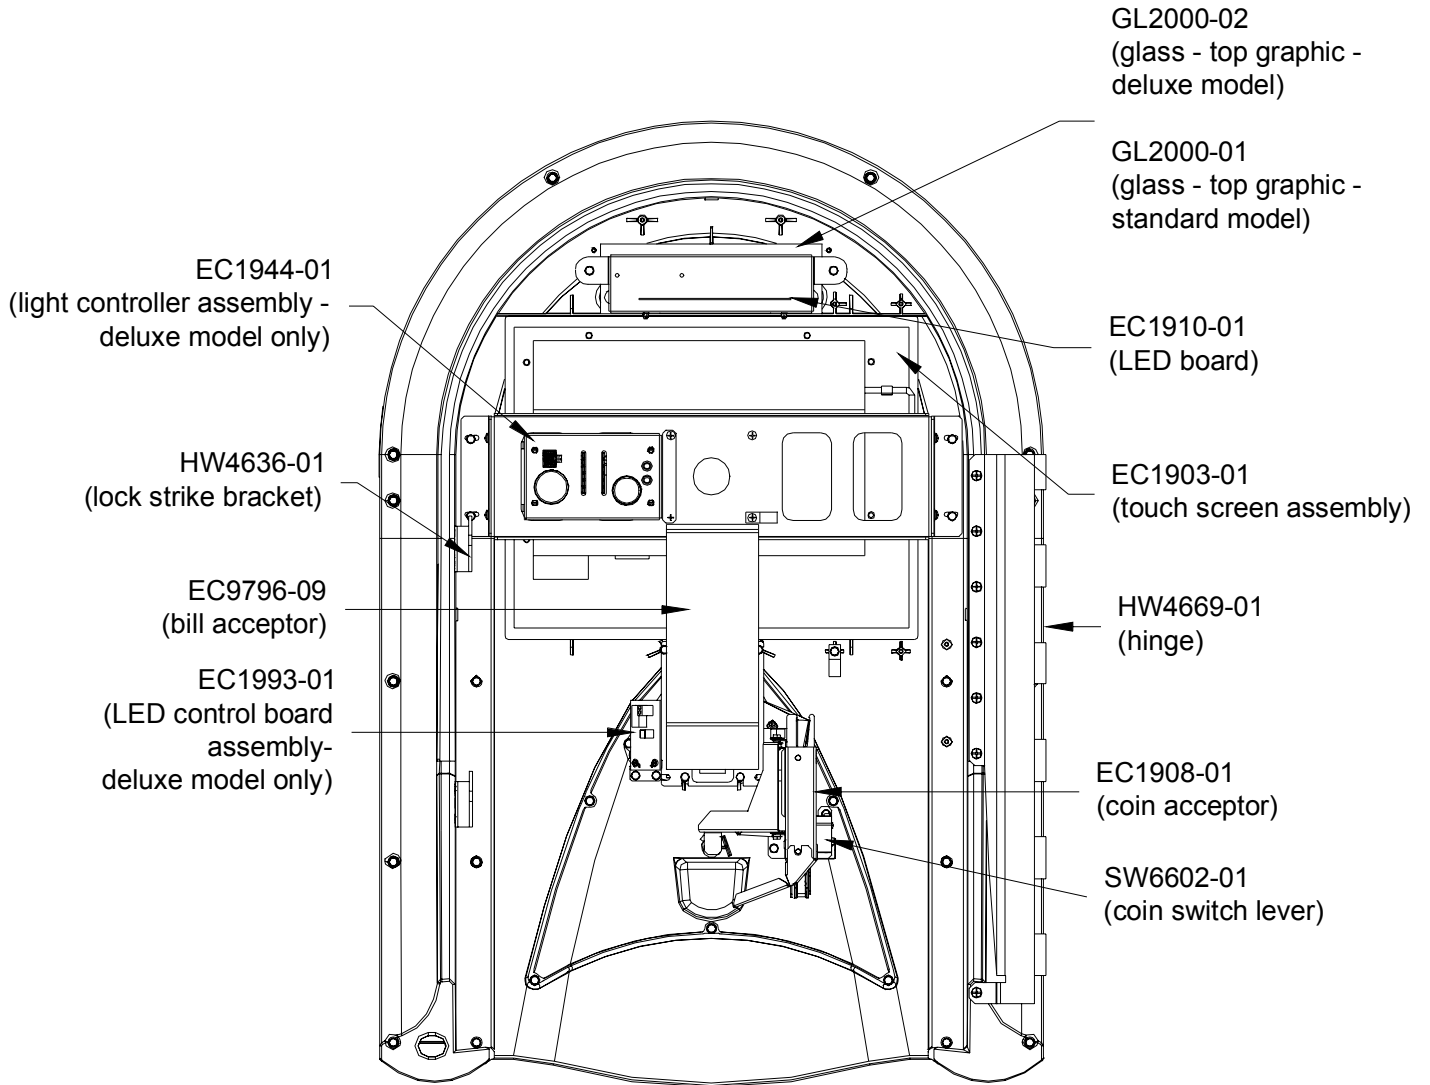

DOOR ASSEMBLY SHOWN FROM BACK SIDE WITHOUT CABINET

MOD BOX PARTS LIST

Item	Description
EC1900-01	PLUG AND CORD
EC1903-01	TOUCH SCREEN ASSEMBLY
EC1908-01	COIN ACCEPTOR - 3-1/2"
EC1909-01	COMPUTER CORE FAN
EC1910-01	LED ILLUMINATION BOARD
EC1911-01	POWER TRANSFORMER
EC1913-02	COMMUNICATION CONTROLLER ASSEMBLY
EC1914-02	250W AMPLIFIER ASSEMBLY
EC1915-02	COMPUTER ASSEMBLY
EC1930-01	I R REMOTE CONTROL
EC1932-01	TRANSFORMER ASSEMBLY - AUDIO OUTPUT (DELUXE ONLY)
EC1943-01	POWER SUPPLY
EC1944-01	LIGHT CONTROLLER ASSEMBLY (DELUXE ONLY)
EC1958-01	PREAMP ACCESSORY BOARD (DELUXE ONLY)
EC1992-01	ROPE LIGHTS (DELUXE ONLY)
EC1995-02	D-LINK WIRELESS ROUTER
EC1997-01	SYSTEM POWER SUPPLY
EC1998-01	CABINET FAN ASSEMBLY
EC9796-09	MEI BILL ACCEPTOR (AE2611 U7)
GL2000-01	GLASS - TOP GRAPHIC, (STANDARD MODEL)
GL2000-02	GLASS - TOP GRAPHIC, (DELUXE MODEL)
HW4609-01	CABINET
HW4610-01	COIN CONTAINER
HW4623-01	COIN BOX RETAINER BRACKET
HW4636-01	LOCK STRIKE BRACKET
HW4665-01	SIDE PANEL (STANDARD MODEL)
HW4666-01	TOP PANEL (STANDARD MODEL)
HW4669-01	HINGE
HW4677-01	SIDE PANEL (DELUXE MODEL)
HW4678-01	TOP PANEL (DELUXE MODEL)
HW4689-02	DOOR PANEL ASSEMBLY (DELUXE MODEL)
HW4689-03	DOOR PANEL ASSEMBLY (STANDARD MODEL)
HW4879-01	CABLE TIE HOLDER (DELUXE ONLY)
PA0097-XX	PROGRAMMED HARD DRIVE
SW6601-01	PUSHBUTTON SWITCH
SW6603-01	ROCKER SWITCH