

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

**Removal/Installation of Major Assemblies -
Ion eVo Wallette/Megatouch Entertainer**

Bill Acceptor Removal

1. Turn off and unplug the game.
2. Unlock and open the cash door.
3. Remove the coin box and remove the bill acceptor magazine from the game.
4. Remove the screw securing the coupler bracket but keep the cable(s) connected. This bracket only needs to be moved aside in order to access the screw underneath. See Figure 1.

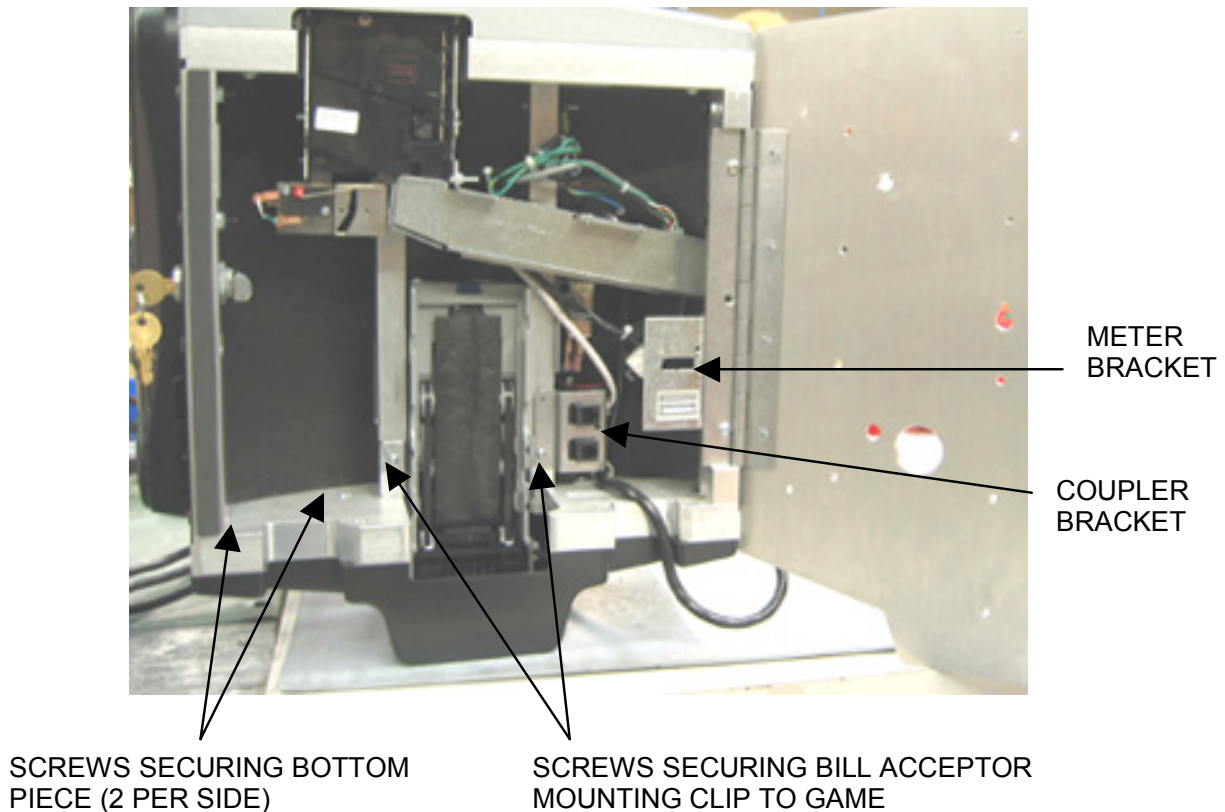


FIGURE 1 - EVO WALLETTTE/MEGATOUCH ENTERTAINER FROM THE REAR

5. Remove the 4 screws securing the bottom support piece to the game and remove the bottom piece. If necessary, remove the nut and screw securing the meter bracket and remove the bracket in order to access the screws. See Figure 1.
6. Remove the remaining screw securing the bill acceptor mounting clip to the game. See Figure 1.
7. Gently pull up on the bill acceptor so that you can access the two connectors on the right side. You may need to use a flathead screwdriver to pry underneath the metal mounting clips to free the bill acceptor. Disconnect the 2 wire connectors from the bill acceptor, making sure to note the loca-

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

Removal/Installation of Major Assemblies - Ion eVo Walletoe/Megatouch Entertainer (cont'd)

tion and orientation of each connector. Then, remove the bill acceptor from the game.

8. Remove the 2 screws securing the front of the bill acceptor to the mounting clip.

Bill Acceptor Installation

1. Reattach the bill acceptor mounting clip to the front of the bill acceptor with the 2 screws.
2. Reconnect the 2 wire connectors at the top and the bottom of the bill acceptor, with a gap left in between. The 10-pin connector should be plugged in above the 12-pin connector. **NOTE: The connectors MUST be installed in the proper slots. Failure to do so will result in game malfunction.**
3. Replace the bill acceptor assembly in the game and secure the left side of the mounting clip with the screw. See Figure 1. Do not reinstall the screw on the right side yet.
4. Replace the bottom support piece and secure it using the 4 screws. **NOTE: If you are having difficulty reinstalling the bottom piece, loosen the remaining screw securing the bill acceptor mounting clip to the game (see Figure 1). After installing the bottom piece, make sure to retighten the screw.**
5. Replace the bill acceptor magazine and the coin box.
6. Replace the coupler bracket, and secure it (and the right side of the bill acceptor mounting clip) with the screw.
7. If you removed the meter bracket, replace it and secure it to the game with the screw and nut.
8. Close and lock the cash door.
9. Plug in and turn on the game.