

merit industries, inc.

# Field Bulletin

Date:11/03/00

- Issue:** Difficulty removing and installing the coinbox
- Games affected:** MAXX Select and Slim MAXX games with model numbers G20-105-1XX, G20-105-2XX, and G20-105-3XX
- Symptom:** It has been reported that in some of the MAXX Select and Slim MAXX games, the coinbox has been difficult to remove and install.
- Cause:** This problem may be caused by a mis-alignment of the game “bonnet” (cover). Re-adjusting the bonnet will make coinbox removal and installation easier.
- Solution:** Follow the instructions below to re-adjust the bonnet.

## TOOLS/EQUIPMENT REQUIRED:

- Back door key to game
- Coinbox key (to unlock/remove coinbox)
- Phillips screwdriver

**NOTE:** The coinboxes on MAXX Select and Slim MAXX games may need to be pushed in after being unlocked in order to release the lock mechanism. This will need to be done especially if the coinbox has been pulled while it was locked. Apply inward pressure to the coinbox after unlocking to release the mechanism.

For games where coinbox removal and installation is extremely difficult:

1. Turn off power to the game and disconnect it from its power source.
2. Unlock, open, and remove the back door from the game.
3. Using a Phillips screwdriver, loosen the 2 knurled thumbscrews securing the bonnet to the game. See Figure 1.
4. Unlock and remove the coinbox from the game.
5. Align the bonnet with the left (facing) side of the monitor bezel.
6. Finger-tighten the knurled thumbscrews (that hold the bonnet in place).
7. Using the Phillips screwdriver, tighten the knurled thumbscrews no more than ¼ turn more.

8. Install the coin box and check for fit. It should be easier to install and remove the coinbox from the game. Check that the coinbox is secure after locking it in the game, and can be removed after unlocking it. When finished, make sure to lock the coinbox in the game.
9. Install, connect, close, and lock the back door of the game.
10. Plug in the game and turn on the power.

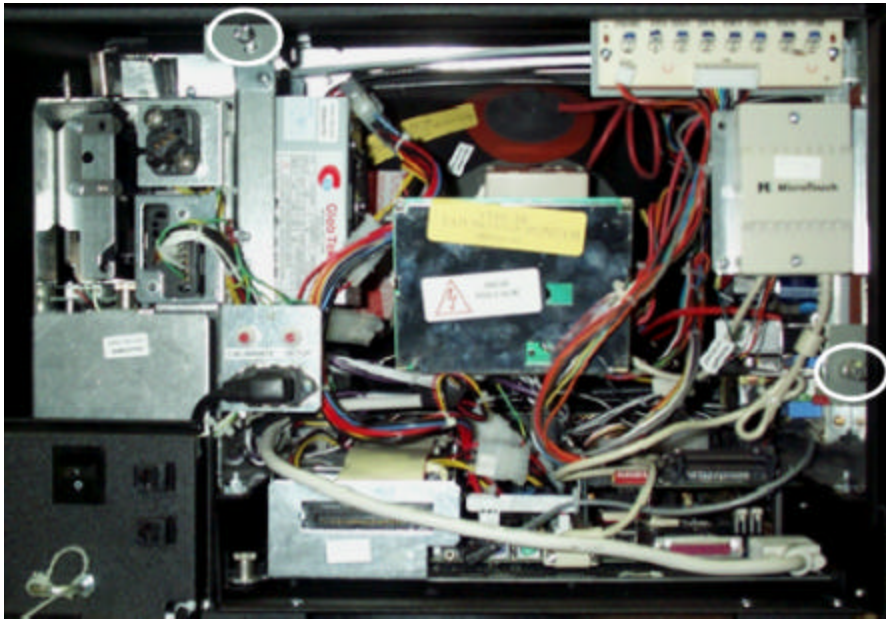


Figure 1 - Location of the two knurled thumbscrews securing the bonnet to the game

Lauri Kalb  
Technical Publications Manager  
Merit Industries, Inc.