



Date: 12-21-07

FIELD BULLETIN

- Issue:** Some MoD BoX jukeboxes were built with the coin acceptor installed incorrectly.
- Games affected:** Only MoD BoX jukeboxes are affected.
- Symptoms:** If the coin acceptor is installed incorrectly, coin jams may occur.
- Solution:** If your MoD BoX is experiencing coin jams, follow the instructions below to check the seating of the coin mech.

1. Unlock and open the jukebox door and press the **SERVICE** button on the communications controller to enter Service Mode.
2. Touch **Shutdown Jukebox** and confirm that you want to shut it down. When the computer system has turned itself off, turn the power switch OFF.
3. Using Figures 1 and 2 below, check to see if the pin on the coin mech is properly inserted through the hole in the metal bracket and then through the hole in the door boss. If the pin on the coin mech is visible as shown in Figure 1, loosen the 3 screws securing the coin mech assembly to the door.
4. Seat the top pin on the coin acceptor into the hole in the metal bracket and then through the hole in the door boss. Seat the bottom pin on the coin mech into the hole in the door boss.
5. Make sure that the coin acceptor is sitting flat against the metal bracket, which is sitting flat against the door boss (see Figure 2).
6. While applying some pressure to hold the coin mech assembly in place, retighten the 3 screws securing the coin mech assembly.
7. Make sure that the coin acceptor is flush to the coin chute guide and door.

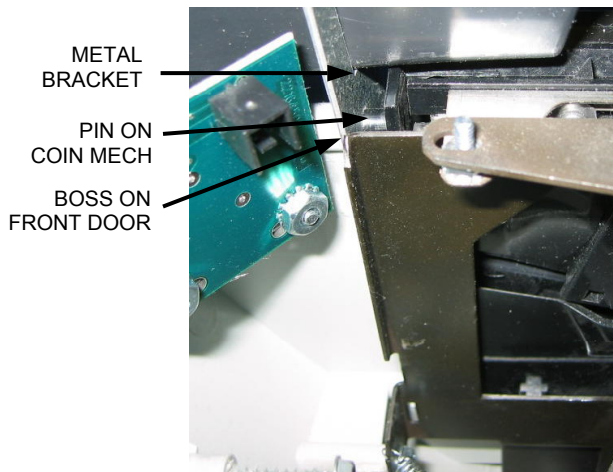


FIGURE 1 – COIN MECH IMPROPERLY INSTALLED – THE PIN ON THE COIN MECH IS NOT PROTRUDING THROUGH THE HOLE IN THE METAL BRACKET

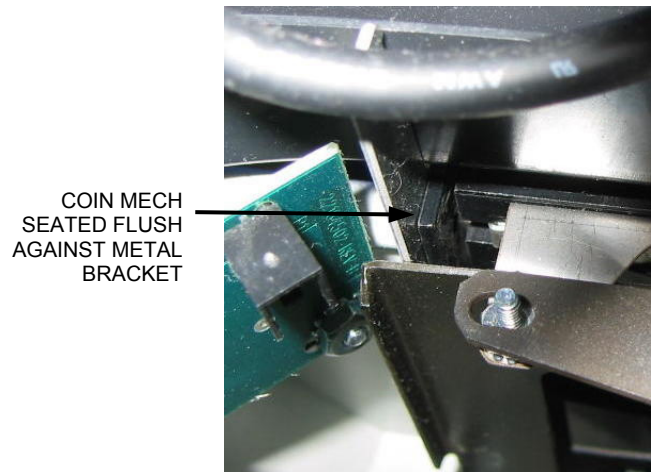


FIGURE 2 – COIN MECH PROPERLY INSTALLED – THE COIN ACCEPTOR IS SITTING FLAT AGAINST THE BRACKET, WHICH IS SITTING FLAT AGAINST THE DOOR BOSS

If you have any questions, please contact Merit Customer Service and Technical Support by phone at 215-639-4700 or 1-800-523-2760 or by E-mail: TechCenter@meritind.com.