

## **ATTENTION:**

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

### **Removal/Installation of Hard Drive - EZ MAXX/MAXX Elite**

#### **Hard Drive Removal**

1. Turn off and unplug the game.
2. Unlock and open the rear door.
3. Remove the centronics cable from the clamp fastened to the hard drive (See Figure 1).
4. Remove the screw and washer fastening the hard drive mounting plate to the rear door and carefully pull the hard drive assembly away from the door. See Figure 1.
5. Remove the 4 screws and shoulder washers fastening the hard drive to the mounting plate. See Figure 1.
6. Unplug the 4-pin power connector and the ribbon cable from the hard drive and remove the drive. See Figure 1.
7. Note the orientation of the cable clamp on the hard drive, then carefully remove the clamp from the surface of the drive by using dental floss to cut the foam tape. Use denatured alcohol to remove the remaining foam tape from the clamp.

#### **Hard Drive Installation**

1. Use double-sided foam tape to attach the cable clamp to the supplied hard drive in the same manner as the old drive.
2. Plug the power connector and ribbon cable into the supplied hard drive.
3. Place the hard drive in the mounting plate and secure it with the 4 screws and shoulder washers.
4. Replace the hard drive assembly on the rear door of the game and secure it with the screw and washer.
5. Replace the centronics cable in the cable clamp.
6. Close and lock the rear door.
7. Plug in and turn on the game.

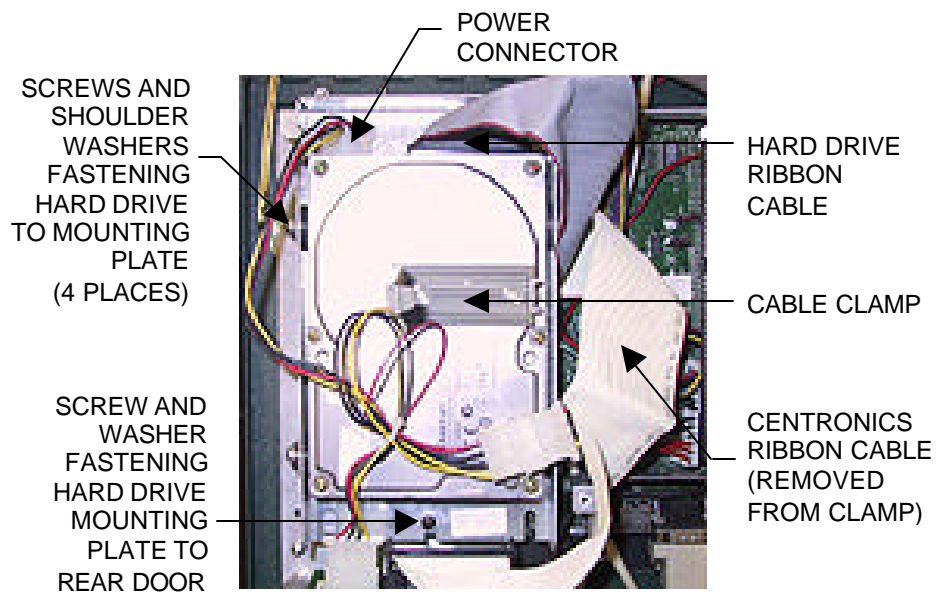


FIGURE 1 - EZ MAXX/MAXX ELITE - CLOSEUP OF CPU SECTION