

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

Removal/Installation of Hard Drive - FORCE Upright w/ Coin Door

Hard Drive Removal

1. Turn off and unplug the game.
2. Unlock and open the front door to access the electronics shelf.
3. Remove the 2 screws securing the I/O board mounting plate to the hard drive mounting plate (see Figure 1). The I/O board assembly will need to be moved aside in order to access the hard drive.
4. Remove the screw securing the hard drive mounting plate to the game (see Figure 2).
5. Remove the 4 screws and shoulder washers fastening the hard drive to the mounting plate.
6. Disconnect the hard drive ribbon cable and the hard drive power connector.

Hard Drive Installation

1. Plug the ribbon cable and power connector into the new hard drive.
2. Fasten the hard drive to the mounting plate with the 4 screws and shoulder washers.
3. Fasten the hard drive mounting plate to the game with the mounting screw (see Figure 2).
4. Fasten the I/O board mounting plate to the hard drive mounting plate with the 2 screws (see Figure 1).
5. Close and lock the front door.
6. Plug in and turn on the game.

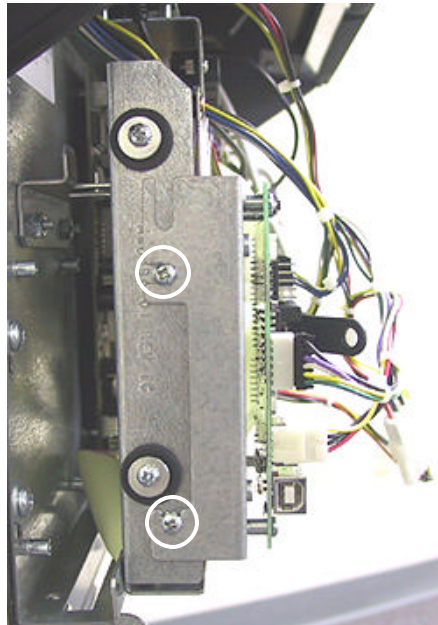


FIGURE 1 - HARD DRIVE REMOVAL - LOCATION OF SCREWS SECURING I/O BOARD MOUNTING PLATE TO HARD DRIVE MOUNTING PLATE

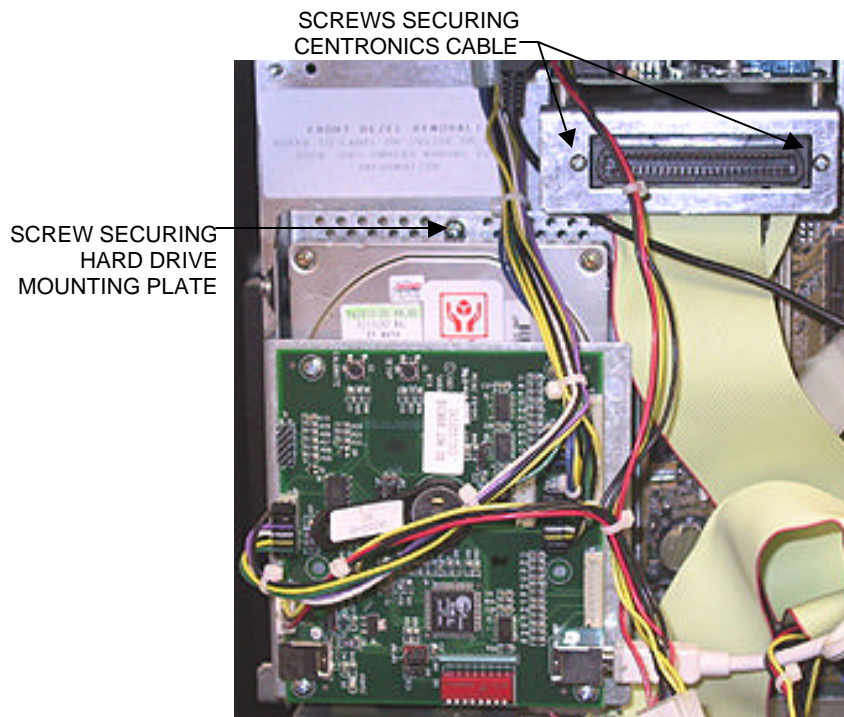


FIGURE 2 - HARD DRIVE REMOVAL