

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

**Removal/Installation of Major Assemblies -
Ion Rx**

Credit Card Reader Removal

1. Turn off and unplug the game.
2. Unlock the game, then open it by pulling the rear of the top bezel forward.
3. Remove the 4 screws securing the credit card reader to the top bezel (see Figure 1). *Note: To gain better access to the bottom screw on the reader, it may be easier to remove the thumbscrew that secures the monitor support arm to the monitor (see Figure 2). If you remove the thumbscrew from the monitor support arm, be very careful not to strain the cables that run from the system to the monitor.*

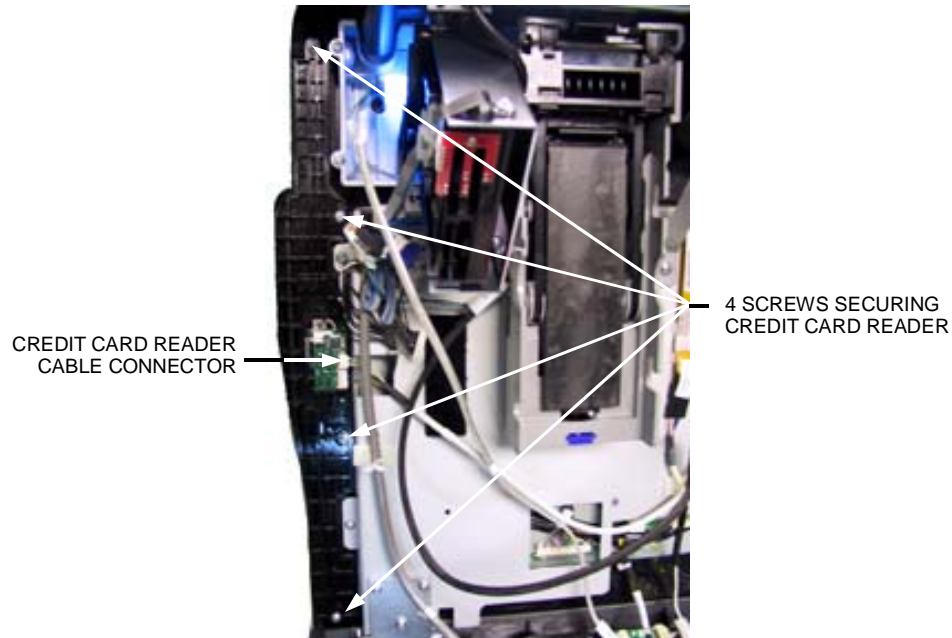


FIGURE 1 - REAR OF CREDIT CARD READER



FIGURE 2 - REAR VIEW OF MONITOR ASSEMBLY

**Troubleshooting Information - Removal/Installation of Major Assemblies -
Ion Rx**

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ESD-SENSITIVE DEVICES

**Removal/Installation of Major Assemblies -
Ion Rx (cont'd)**

Credit Card Reader Installation

4. Remove the credit card reader connector from the credit card reader and attach it to the new credit card reader in the same place (see Figure 1).
5. Place the new credit card reader in the unit and secure with the same four screws you removed from the old reader (see Figure 1). If you removed the thumbscrew from the monitor support arm, replace it now (see Figure 2).
6. Press the button on the monitor support arm to release the arm (see Figure 2), then close and lock the top bezel.
7. Plug in and turn on the game.
8. You can now test the credit card reader's functionality by entering Operator Setup, pressing the **Credit Card** button, then pressing **Credit Card Functionality Test**.