

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

**Removal/Installation of Major Assemblies -
Money Shoot**

Monitor Removal

1. Turn off and unplug the game.
2. Unlock and open the top bezel
3. Use dental floss to carefully cut the foam tape holding the touchscreen to the monitor until you are able to completely remove the screen. Once the touchscreen is completely free from the monitor, remove any residual foam tape from the monitor with denatured alcohol. You will need to place the touchscreen on a stable surface until it is installed on the new monitor.
4. Remove the 2 screws securing the monitor mounting bracket to the game. See Figure 2.
5. Carefully shifting the monitor mounting bracket on the pegs (if necessary), remove the following connections behind the monitor (see Figure 3):
 - VGA monitor connector (gray cord),
 - Power connector and ground screw,
 - Monitor control board connector,
 - Power cable connector (black and yellow wire).
6. Slide the monitor assembly off the bezel and put aside.
7. Unlock and open the monitor bezel.
8. If you will be reusing the existing touchscreen, remove the 2 screws fastening the touchscreen controller to back of the monitor bezel (see Figure 1) and disconnect the cable from the underside of the controller. Locate and disconnect the Molex connector (orange and gray wires). See Figure 1.

If you will not be reusing the existing touchscreen, remove the cable clamps securing the touchscreen cable and the touchscreen power harness. Next, remove the screws fastening the touchscreen controller (see Figure 6) to the game and disconnect the cable from the underside of the controller. Locate and disconnect the Molex connector (orange and gray wires). See Figure 1.
9. Return to the monitor assembly and remove the 4 corner screws securing the monitor to the bracket. See Figure 2. Remove the monitor.
10. Close and lock the monitor bezel.

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

**Removal/Installation of Major Assemblies -
Money Shoot (cont'd)**

Monitor Installation

1. Attach the new monitor to the monitor mounting bracket with the 4 screws.
2. If your replacement monitor already has a touchscreen, go to Step 3.

If you are using the original touchscreen, clean the glass on the new LCD monitor with the supplied alcohol wipe, then cut pieces of the supplied ½" foam tape long enough to cover each edge of the monitor without overlapping. After the tape is in place on the monitor, peel off the packing. Carefully place the touchscreen over the monitor in the same manner it was attached to the old monitor, making sure the screen is properly and evenly aligned over the glass, then connect to the LCD panel. Clean the front of the touchscreen with the supplied alcohol wipe once it is in place.
3. Open the top bezel, then slide the monitor assembly onto the 4 pegs. Reattach the 2 screws securing the monitor assembly to the monitor bezel.
4. Reconnect the following connections behind the monitor (see Figure 3). Make sure to properly dress the wires so they remain secured. Unlock and open the monitor bezel if necessary:
 - VGA monitor connector (gray cord),
 - Power connector and ground screw,
 - Monitor control board wire connector, and
 - Power cable connector (black and yellow wire).
5. If you are reusing the existing touchscreen, reconnect the touchscreen cable underneath the touchscreen controller and secure the controller with the existing 2 screws. Also connect the Molex connector (orange and gray wires) to the main power harness. Make sure to properly dress the wires so they remain secured. See Figure 1.

If you are not reusing the existing touchscreen, install the new touchscreen controller with the 2 screws. Connect the molex connector, touchscreen controller cable, and the touchscreen power harness. Make sure to properly dress the wires so they remain secured. See Figure 1.
6. Close and lock the monitor and top bezels.
7. Plug in and turn on the game.

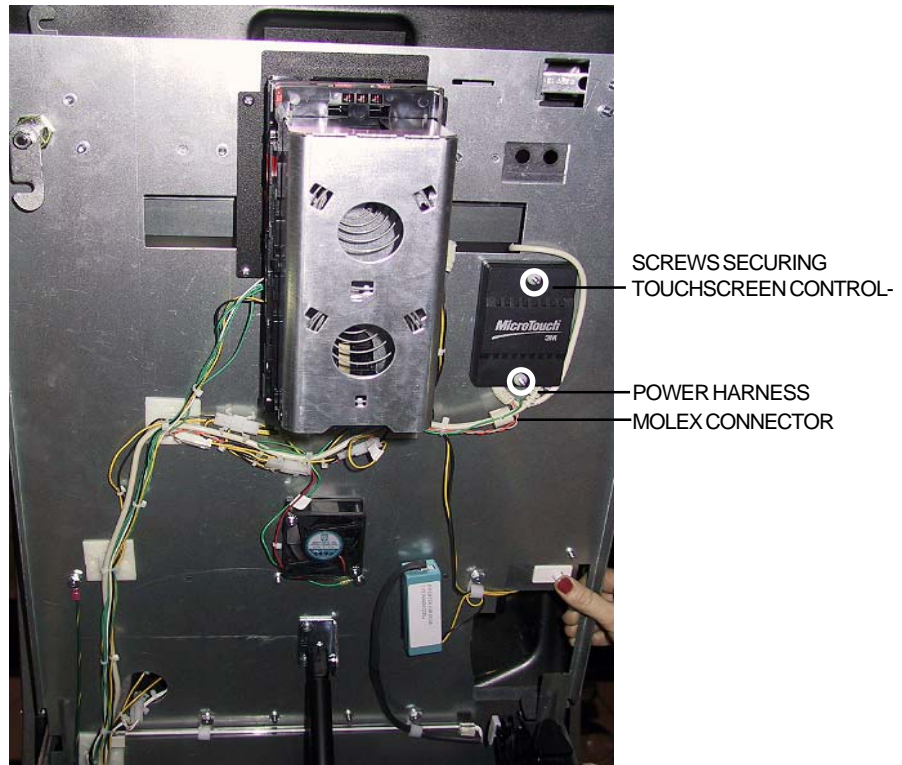


FIGURE 1 - UNDERSIDE OF MONITOR BEZEL

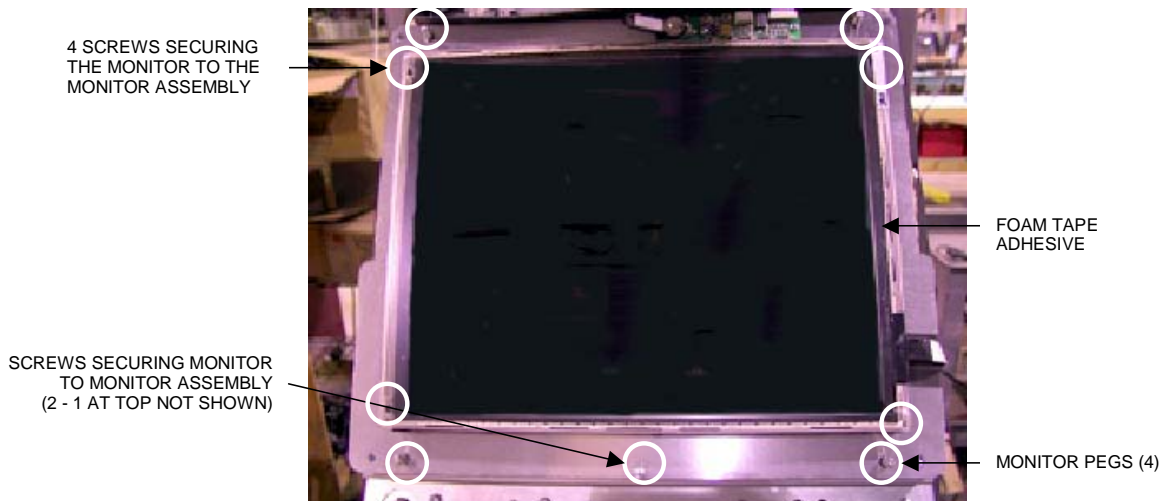


FIGURE 2 - MONITOR ASSEMBLY - TOP BEZEL OPEN



WIRES FOR REMOVAL
FROM MONITOR

FIGURE 3 - UNDERSIDE OF MONITOR ASSEMBLY