

ATTENTION:

OBSERVE PRECAUTIONS FOR HANDLING ELECTROSTATIC DEVICES

Removal/Installation of Major Assemblies - Money Shoot

Touchscreen Removal

1. Turn off and unplug the game.
2. Unlock and open the top and monitor bezels.
3. Cut the tie wraps securing the touchscreen cable and the touchscreen power harness, then remove the 2 screws fastening the touchscreen controller (see Figure 1) to the game and disconnect the cable from the back of the controller. Locate and disconnect the Molex connector (orange and gray wires) running from the touchscreen controller cable to the main power harness, and also disconnect the ground screw. See Figure 1.
4. Close and lock the monitor bezel.
5. Use dental floss to carefully cut the foam tape holding the touchscreen to the monitor until you are able to completely remove the screen. See Figure 2. Once the touchscreen is completely free from the monitor, remove any residual foam tape with denatured alcohol.

Touchscreen Installation

1. Clean the glass on the reverse side of the new touchscreen with the supplied alcohol wipe, then cut pieces of the supplied 1/2" foam tape long enough to cover each edge of the monitor without overlapping. After the tape is in place on the monitor, peel off the backing. Carefully place the touchscreen over the monitor in the same manner it was attached to the old monitor, making sure the screen is properly and evenly aligned over the glass. Clean the front of the touchscreen with the supplied alcohol wipe once it is in place.
2. Unlock and open the top and monitor bezels.
3. Reconnect the touchscreen cable underneath the touchscreen controller and secure the controller with the existing hardware. Also connect the Molex connector (orange and gray wires) to the main power harness (after routing the wires through the cable clamps). See Figure 1.
4. Close and lock the monitor bezel.
5. Plug in and turn on the game.
6. When the game is finished booting, press the CALIBRATE button on the monitor control board.
7. Close and lock the top bezel, then calibrate the touchscreen.

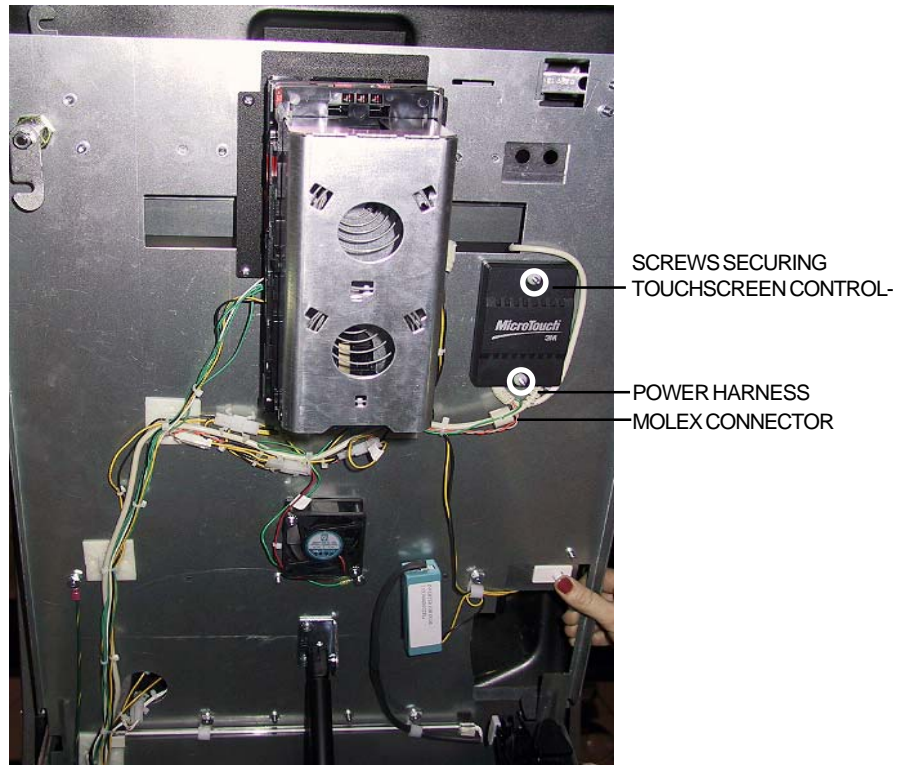


FIGURE 1 - UNDERSIDE OF MONITOR BEZEL

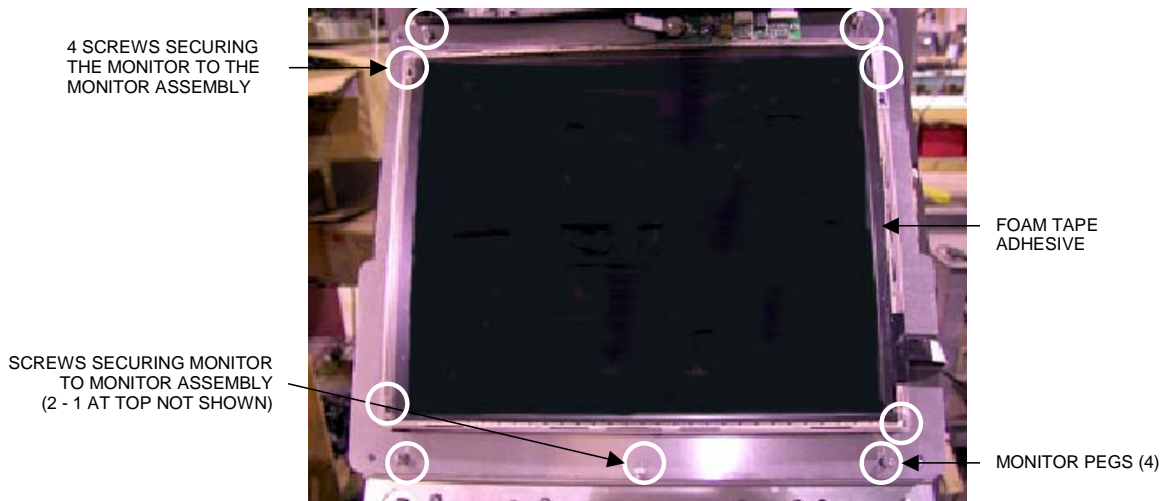


FIGURE 2 - MONITOR ASSEMBLY - TOP BEZEL OPEN